

3P Tundish Installation Instructions

3P Tundish with overflow and securing bracket.

The 3P Tundish acts as a Type AA air gap to comply with BS EN 13076; devices to prevent pollution by backflow of potable water. The 3P Tundish itself and its' ½" feed nozzle are both freely rotatable in the wall mounting bracket.

Install the tundish so that the potable water feed can gravity flow freely into the tank. Check the rate of delivery of potable water does not exceed the capacity of the connected hose/pipework to reach the tank at your site, without backing up. This is part of the Commissioning of your system.

Note the 3P Tundish has an optional overflow. This is recommended and particularly useful if the top-up feed pipework to the underground tank gets blocked, as it will prevent flooding of the Room where the controller is located. The overflow can be connected with a Universal Waste Adapter. (Product Code 5000411UWC).

