

Installing the VF1 Filter Dirt Retention Basket

1. Remove the filter unit from the VF1, lay it on its front on a flat surface, so stainless steel mesh is uppermost.



2. Using a 3 mm Allen key, undo the screws retaining the Filter mesh.



3. Remove the filter mesh, and set aside.



4. Install the Dirt Retention Basket, aligning the four holes in the Basket sides with the 4 brass receiving holes in the filter unit sides.




5. First tighten the lower pair of hexagonal headed screws, using a 5 mm Allen key.




6. Then tighten the upper pair of screws. Hand tighten only.



7. Then replace the filter mesh, fit the lower end first, sliding this in to position.

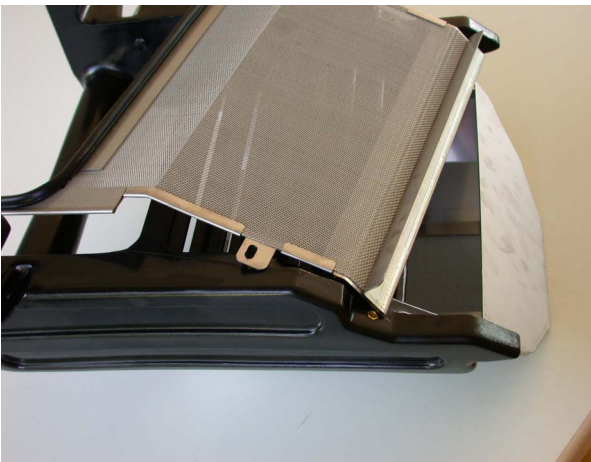

8. Hand tighten the screws holding the filter mesh in position.

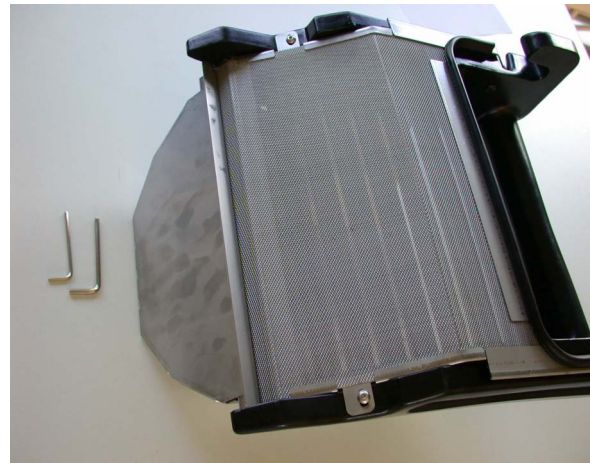

To clean the basket see the instructions for cleaning of the VF1 filter mesh.