

Rainbowl

6. Tank-to-Tank Connection

from your water butt supplier.

point near the base.

If you wish, you can connect two Rainbowl Water Butts together using the drain down

A 3P 3/4" Tank to Tank Connection Kit is

ideal for this. Measure the distance between

the threaded ports before ordering the

required length of hose in the Connection Kit

210 Litres

Art. No. 9000864K Art. No. 9000870K Art. No. 9000872K Art. No. 9000876K



Rainbowl

210 Litres

Art. No. 9000864K Art. No. 9000870K Art. No. 9000872K Art. No. 9000876K

Instructions



To fill the RainBowl, we recommend using the 3P Filter Collector Universal.

Where the water butt cannot be located within 30 cm of the downpipe, the longer Universal Long Link Kits are available online (Art. No. 9000123U to U5).



Universal is available in four colours to match your downpipe; black,

The 3P Filter Collector

grey, brown and white.



5. Childproof lid

Using the screw provided. Screw it into the flat section of the underside of the lid (pictured). Once in place, rotate the lid (so the screw is under the water butt lip).

The Rainbowl is delivered with an accessory kit which includes a chrome tap, wall bracket, and screws.

If in any doubt during installation, please consult a professional tradesperson or the supplier of your filter or diverter.

www.3PTechnik.co.uk www.3PTechnik.co.uk





1. Setting up

Site the rain tank on a firm, level surface adjacent to a downpipe.

Read through these instructions and the 3P Filter Collector Instructions or other rain diverter instructions fully before proceeding.

If in any doubt during installation, please consult a professional tradesperson or the supplier of your filter or diverter.



2. Fitting the 3P Filter Collector Universal Link Kit

Marking Out


Measure down 65mm (approx) from the top of the water butt. This position is ideal for all connections of 32mm (1 1/4") or less. Mark the point.

Hole Cutter Selection - 32 mm

To fill the water butt with the recommended 3P Filter Collector Universal, select the 32 mm flat bit provided with the 3P Filter Collector Universal.

Drilling

Offer the 32mm drill to your marked point, proceed to drill. If you are not fitting a 3P Filter Collector Universal, double check you are drilling the correct sized hole for your chosen connection set.

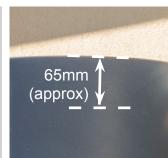





2. Continued

Z I O LIU

Attaching a Back-Nut & Hose Tail

Hold the back nut on the inside of the hole and screw on the hose tail and rubber grommet on the outside.

3. Connecting the Tap

Screw the 3/4" brass tap provided in the Kit into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap to create a more watertight seal and to allow the tap to sit in the correct position.

4. Fixing the Wall Bracket

Fill the tank with water before attaching the wall bracket to avoid deflection. The bracket is optional.

Winter Care Precautions

To prevent any damage from being caused, we recommend the Rainbowl is drained completely and disconnected from the rainwater inlet during prolonged freezing weather



210 Litres

Art. No. 9000864K Art. No. 9000870K Art. No. 9000872K Art. No. 9000876K





www.3PTechnik.co.uk www.3PTechnik.co.uk