

Instructions



Filter Collector Universal: Art. No. 2000840U. Available in 3 colours to match downpipe.



*** Top Tip!** Before filling with water, check the drain-down point (and tap point if not using) is fully tightened. It may just need a ¼ turn. A 2p or 50p piece is the perfect tool if you don't another tool.

Locking the Lid


Rotate lid to lock and ensure child-safe.




To fill the Rustico, we recommend using the 3P Filter Collector Universal.

Where the water butt cannot be located within 30 cm of the downpipe, the longer Universal Long Link Kits are available online (Art. No. 9000123U to U5).

If in any doubt during installation, please consult a professional tradesperson.

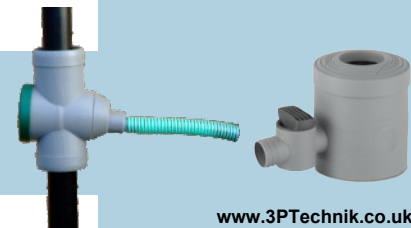

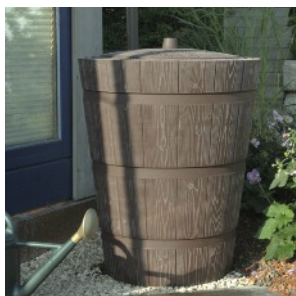

Setting Up

Site the water butt on a firm level surface, adjacent to your downpipe.

Refer to your downpipe diverter instructions.



Optional Tap

Unscrew the upper grey bung to reveal the metal thread and screw in a 3/4" tap. Wrap the thread with PTFE tape prior to installation. Do not over-tighten.

Attaching an optional 3P Filter Collector Universal



1. Marking Out

Measure down 70 mm from the lip of the water butt. This should be at a point well away from either of the two bayonet lid locking positions.

This position is ideal for all connections at 32 mm

2.1 Hole Cutter Selection - 32 mm

To fill the water butt with the recommended 3P Filter Collector Universal, select the 32 mm flat bit from the set provided with the filter.

2.2 Other Diverters & Connectors

Refer to your diverter's instructions for the correct sized hole to form. Check your own diverter's instructions before proceeding.



Note: Images in this section show the "Tuscan" dipping water butt, however all dimensions are the same as the "Rustico". It's only the texture and colour are different.

Attaching an optional 3P Filter Collector Universal continued ...



3. Drilling

Offer the drill to the marked point, proceed to drill the hole at 32 mm (or at your selected holes size for your connection set). Check and re-check you are going to drill the correct size of hole for the connection set that you are using.



4. Attaching a Back-Nut & Hose Tail

A back nut and rubber seal can be fitted as shown. Hold the back-nut and rubber seal in position and screw in the hoesail.



5. Hosetail in Position

This picture shows a 1" BSP thread - 32 mm hosetail in position (within a 32 mm drilled hole).



6. Fitting the 3P Filter Collector

Push the spiral hose on to the hosetail and secure with jubilee clip provided.

Fit the other end on to the smallest Filter Collector outlet.

7. Winter Care Precautions

During extremely cold winters, where daytime temperatures are below zero for several days, it is wise to ensure that the tank is only about 2/3rd's full and the water supply turned off. This will prevent the frozen water from expanding and damaging the tank.

