



5. Childproof Lid

To remove the lid, push down on one end and lift at the opposite end.

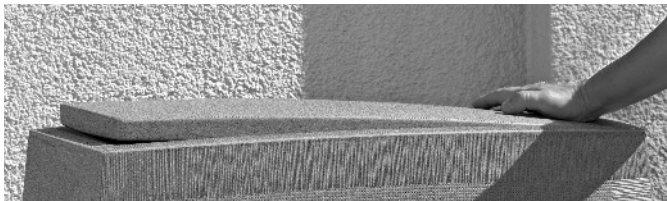

Tank-to-Tank Connection

It is possible to connect two Noblesse tanks together. We recommend using the Tank-to-Tank Connection Kit 250 mm (No. 9000326).




Instructions

To fill the Noblesse, we recommend using the 3P Filter Collector Universal.

The 3P Filter Collector Universal is available in 4 colours and comes with a 30cm hose.




Where the water butt cannot be located within 30cm of the downpipe, the longer Universal Long Link Kits are available online (Art. No. 9000123U to U5).

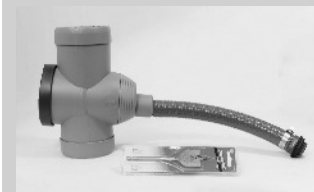

The Noblesse is supplied with an accessory kit which includes a chrome tap, wall bracket, and screws.

If in any doubt during installation, please consult a professional tradesperson.



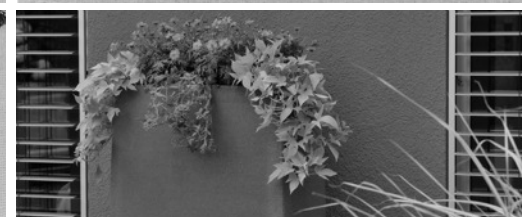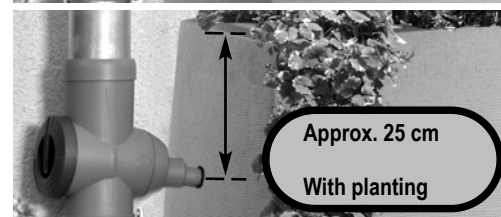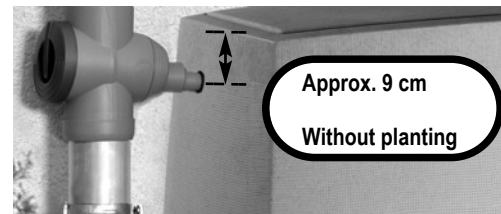

1. Setting Up

Site the Noblesse on a firm, level surface, adjacent to the downpipe.

Refer to your Filter Collector Universal or other rain diverter instructions.

Fix the enclosed (optional) Wall Bracket in exposed situations.

2. Fitting the 3P Filter Collector Universal Link Kit

Marking Out

Measure carefully across from the downpipe to the Noblesse to connect the Filter Collector Universal and mark the entry point for the filter.

We recommend measuring 9 cm from the top of the butt without planting and 25 cm from the top with planting. These positions are ideal for all connections of 32mm (1 1/4") or less. Mark the point.

Hole Cutter Selection - 32 mm


To fill the water butt with the recommended 3P Filter Collector Universal, select the 32mm flat bit provided with the 3P Filter Collector Universal.

Drilling

Offer the 32mm drill to your marked point, proceed to drill. If you are not fitting a 3P Filter Collector Universal, double check you are drilling the correct sized hole for your chosen connection set.

Attaching a Back-Nut & Hosetail

Hold the back nut on the inside of the hole and screw on the hosetail and rubber grommet on the outside.

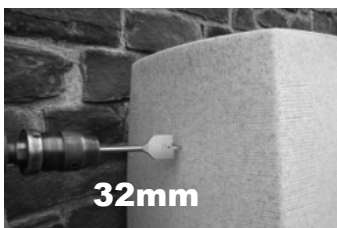

3. Connecting the Tap

Screw the tap provided into the 3/4" BSP connection thread.

Use PTFE tape for extra protection, and to make sure that the tap sits in the correct position *.

Other 3/4" tap fittings can be used.

*** Top Tip!** Before filling with water, check the drain-downs point are fully tightened. They may just need a 1/4 turn. A 2p piece is the perfect tool if you don't have the right sized screwdriver.



Winter Care Precautions

During extremely cold winters, where daytime temperatures are below zero for several days, it is wise to ensure that the tank is only about 2/3rd's full and the water supply turned off. This will prevent the frozen water from expanding and damaging the tank.