



### 5. Childproof Lid


Using the screw provided fasten the lid to the water butt via the hole beneath the rim of the water butt.



### 6. Tank-to-Tank Connection

If you wish, you can connect two Barrique Water Butts together using the drain down point near the base.

A 3P 3/4" Tank to Tank Connection Kit 250mm is ideal for this (Art No. 9000326).

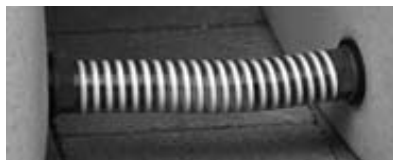

## Instructions

To fill the Barrique, we recommend using the 3P Filter Collector Universal.

Where the water butt cannot be located within 30 cm of the downpipe, the longer Universal Long Link Kits are available online (Art. No. 9000123U to U5).



The 3P Filter Collector Universal is available in three colours to match your downpipe; black, grey and brown.

The Barrique is delivered with an accessory kit which includes a brass tap, wall bracket, and screws.

**If in any doubt during installation, please consult a professional tradesperson or the supplier of your filter or diverter.**

# Barrique

250 Litres

Art. No. 9000680K




## 1. Setting up

Site the rain tank on a firm, level surface adjacent to a downpipe.

Read through these instructions and the 3P Filter Collector Instructions or other rain diverter instructions fully before proceeding.

**If in any doubt during installation, please consult a professional tradesperson or the supplier of your filter or diverter.**

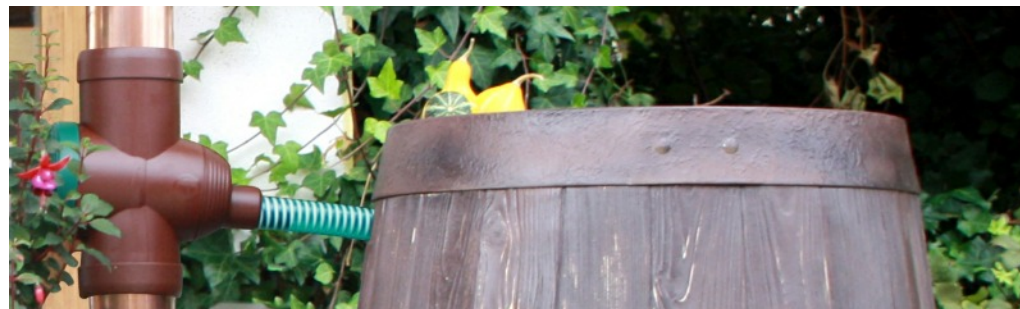

## 2. Fitting the 3P Filter Collector Universal Link Kit

### Marking Out


Measure down 125mm (approx) from the top of the water butt. This position is ideal for all connections of 32mm (1 1/4") or less and mark the point.

### Hole Cutter Selection - 32 mm

To fill the water butt with the recommended 3P Filter Collector Universal, select the 32 mm flat bit provided with the 3P Filter Collector Universal.

### Drilling

Offer the 32mm drill to your marked point, proceed to drill. If you are not fitting a 3P Filter Collector Universal, double check you are drilling the correct sized hole for your chosen connection set.

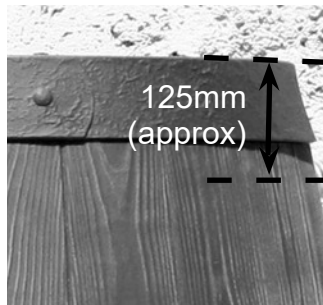

# Barrique

250 Litres

Art. No. 9000680K

## 2. Continued

### Attaching a Back-Nut & Hose Tail

Hold the back nut on the inside of the hole and screw on the hose tail and rubber grommet on the outside.



## 3. Connecting the Tap

Screw the 3/4" brass tap provided in the Kit into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap to create a more watertight seal and to allow the tap to sit in the correct position \*.

## 4. Fixing the Wall Bracket

Fill the tank with water before attaching the wall bracket to avoid deflection. The bracket is optional.

## Winter Care Precautions

During extremely cold winters, where daytime temperatures are below zero for several days, it is wise to ensure that the tank is only about 2/3rd's full and the water supply turned off. This will prevent the frozen water from expanding and damaging the tank.



**\* Top Tip!** Before filling with water, check the drain-down point is fully tightened. It may just need a 1/4 turn. A 2p piece is the perfect tool if you don't have the right sized screwdriver.