

Drop

410 Litres

Art. No. 9000820K 9000825K



Drop

410 Litres

Art. No. 9000820K

Instructions



To fill the Drop, we recommend using the 3P Filter Collector Universal.

Where the water butt cannot be located within 30cm of the downpipe, the longer Universal Long Link Kits are available online (Art. No. 9000123U to




The 3P Filter Collector Universal is available in colours to match your downpipe; black, grey and brown.





5. Removeable Plant Pot

Under the lid is a removable plant pot with retractable handles. To remove, simply pull up the handles (one on each side) and lift.

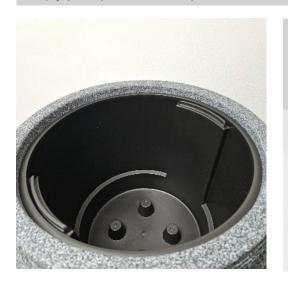

6. Tank-to-Tank Connection

If you wish, you can connect two Drop Water Butts together using the 3/4" drain down point near the base.



The Drop is delivered with a chrome-plated brass tap.

If in any doubt during installation, please consult a professional tradesperson or the supplier of your filter or diverter.

www.3PTechnik.co.uk www.3PTechnik.co.uk



Drop

410 Litres

Art. No. 9000820K 9000825K Drop

410 Litres

Art. No. 9000820K



1. Setting up

Site the rain tank on a firm, level surface adjacent to a downpipe.

Read through these instructions and the 3P Filter Collector Instructions or other rain diverter instructions fully before proceeding.

If in any doubt during installation, please consult a professional tradesperson or the supplier of your filter or diverter.

2. Fitting the 3P Filter Collector Universal Link Kit

Marking Out

Measure down 110mm (approx) from the top of the water butt (with lid on). This position is ideal for all connections of 32mm (1 1/4") or less and mark the point.

Hole Cutter Selection - 32 mm

To fill the water butt with the recommended 3P

Filter Collector Universal, select the 32 mm flat bit provided with the 3P Filter Collector Universal.

Drilling

Offer the 32mm drill to your marked point, proceed to drill. If you are not fitting a 3P Filter Collector Universal, double check you are drilling the correct sized hole for your chosen connection set. Things to note if note fitting a 3P Diverter are: the depth and width of the rim of the waterbutt on the inside. Also and feel with your finger tips the shape of the inside of the water butt to find a non-curved area beneath the rim.



2. Continued

Attaching a Back-Nut & Hose Tail

Screw the hosetail into the hole, then inside the tank, add the washer followed by the back nut and tighten to give a water tight seal.



3. Connecting the Tap

Screw the 3/4" metal tap provided in the Kit into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap to create a more watertight seal and to allow the tap to sit in the correct position *.

4. Optional Planter

The planter tub can be removed using the retractable handles if desired. However we recommend leaving it in situ for extra child safety where appropriate.

Winter Care Precautions

During extremely cold winters, where daytime temperatures are below zero for several days, it is wise to ensure that the tank is only about 2/3rd's full and the water supply turned off. This will prevent the frozen water from expanding and damaging the tank.



www.3PTechnik.co.uk www.3PTechnik.co.uk